



MOXY Unit Quick Start Guide v0.88

Product Overview



Micro USB
Connector

HDMI Video/Audio
Connector

RCA
Video/Audio
Jack



X4 USB 2.0 Port

10/100/1000 Ethernet Port

Package Contents

- x1 MOXY Unit
- x1 HDMI Cable
- x1 Micro USB Charging Cable
- x2 Velcro double side tapes

Connecting to Power


Device is powered by Micro USB cable connected to screen USB port, computer USB port or an adapter.

Make sure you have HDMI cable connected to your monitor before have the power cable on.

Setting up network connection

Wifi

- First time boot up, Moxy unit shows up the Wifi connection steps.

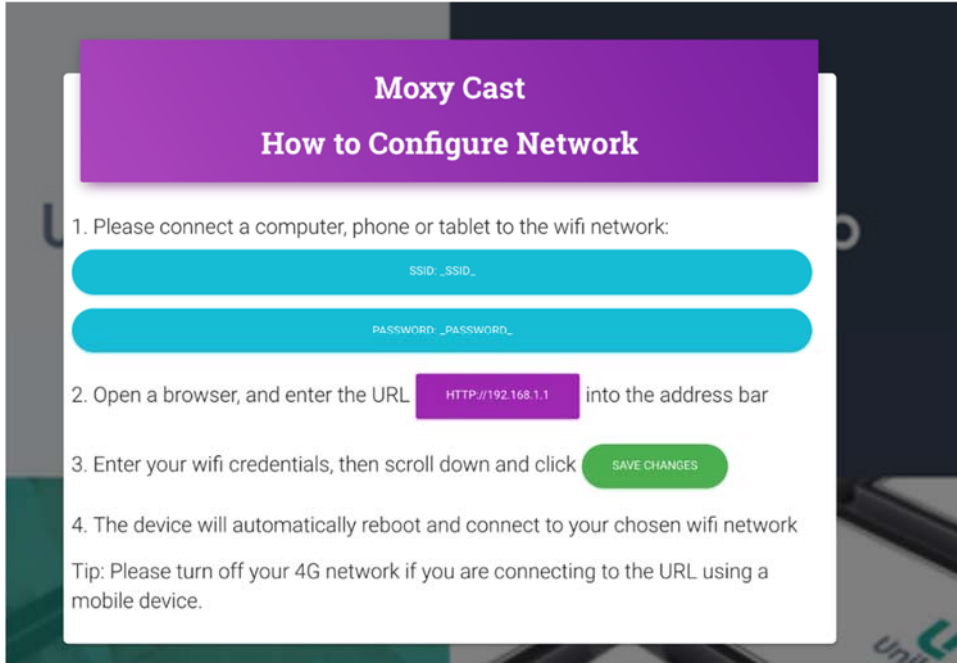


Moxy Cast
How to Configure Network

1. Please connect a computer, phone or tablet to the wifi network:
2. Open a browser, and enter the URL into the address bar
3. Enter your wifi credentials, then scroll down and click
4. The device will automatically reboot and connect to your chosen wifi network

Tip: Please turn off your 4G network if you are connecting to the URL using a mobile device.

- Using your mobile (do remember to turn off mobile data), connecting to Moxy unit hotspot

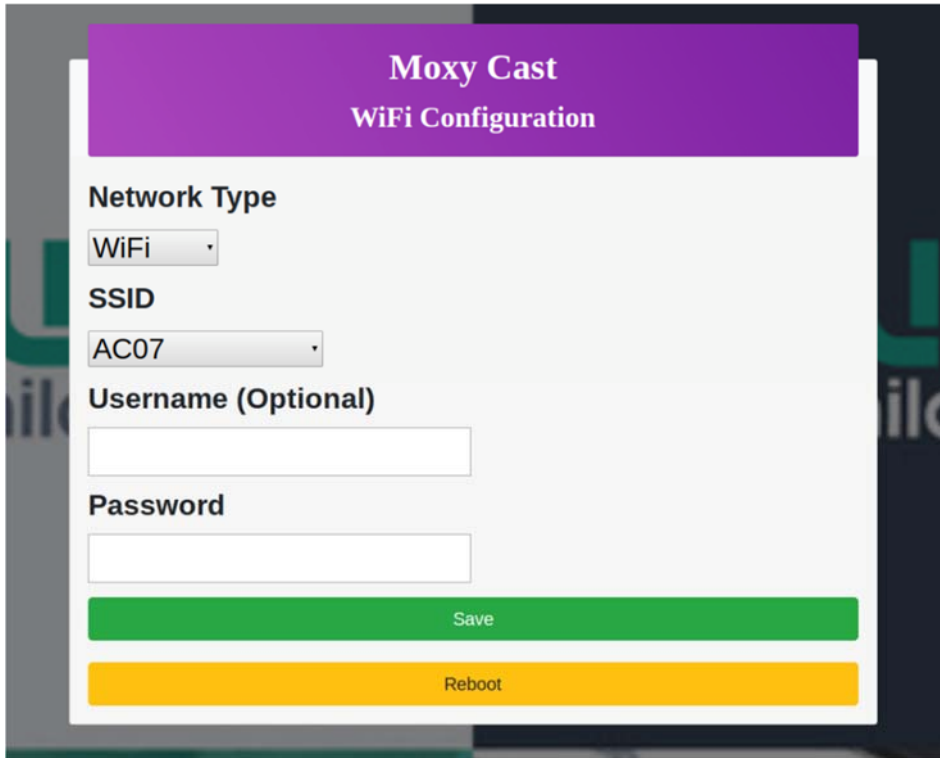

The screenshot shows a web interface for configuring a Moxy Cast device. At the top, there is a purple header with the text "Moxy Cast WiFi Configuration". Below this, the "Network Type" is set to "WiFi" in a dropdown menu. The "SSID" is set to "AC07" in another dropdown menu. There are two empty text input fields for "Username (Optional)" and "Password". At the bottom of the form, there are two buttons: a green "Save" button and a yellow "Reboot" button.

- Pick a Wifi SSID, and enter user name (if needed) and pass, and save
- Reboot Moxy unit

Ethenet

- If cabled Ethernet is preferred, an Ethernet cable can be plugged into the device